

<b>TO START UP</b>	
1	Remove two pins, for both sides of equipment, and pull up top frame, reinsert pins at yellow dots.
2/3	Plug in shorter power cord to computer CPU. Plug in longer power (blue tape) cord for DLP projector.
4	Plug in Speakers.
<b>Plug into surge projector.</b>	
5	Lift up to remove lens cap.
6/7	Switch on Computer CPU. Switch on DLP Projector main power on side of unit.
8	Press Green button on Computer CPU.
9	Press Power button on front of DLP Projector
<b>TO SHUT DOWN</b>	
5	Replace Lens cap
9	Press Power button on front of DLP Projector TWICE
8	Press Green button on Computer CPU
<b>Wait for cooling fans to stop</b>	
6/7	Switch off Computer CPU and DLP Projector
<b>Unplug and disconnect cords</b>	
1	Remove two pins, for both sides of equipment, and Push down top frame, reinsert pins at yellow dots.